

Camera Instructions and Settings for Dissembler Camera System

In the Box:

- Dissembler camera housing: front and back cover
- Brickhouse (BHS), Camscura Pro Covert Camera (DVR) with User's Guide
- 128 GB micro SD card with adaptor (Formatted). See Resources to format additional cards not provided.
- 8000 Mah Battery
- (4) Screws for pole mounting
- Charger
- USB cord

Camera Set Up

Step 1:

Charge your camera with provided charger. Light will be orange until charged then light will turn green. Full charge can take up to twenty four (24) hours to complete.

Step 2:

On the back of the camera is a switch. The switch must be turned to the "gear" position to work properly in the housing.

Step 3:

Remove micro SD card from adaptor and place in appropriate slot in camera.

Step 4:

Using provided USB cord, plug camera into your computer. Install Brickhouse software located on the SD card inside your camera or click this link:

For Mac: [BHS Cam Setup Tool for Mac](#)

For Windows: [BHS Cam Setup Tool for Windows](#)

Step 5:

Run BHS software.

Below are the recommended default settings to use with the Dissembler. This allows up to 120 hours of total recording.

Important, the time and date on your computer must be synced with the camera otherwise the camera will default to an arbitrary date and time.

Camera Instructions and Settings for Dissembler Camera System

The screenshot displays the 'BHS Cam Setup Tool' window. At the top left is the BrickHouse Security logo with the tagline 'WHEN YOU NEED TO KNOW.' To the right of the logo, it shows 'Version 1.5.1' and the website 'http://www.brickhousesecurity.com'. Further right, it identifies the device as 'Model Black Box Pro HD' with 'Firmware Version 1.1.06'. The main interface features a left sidebar with three icons: a clock labeled 'Date Time', gears labeled 'Settings', and a checklist labeled 'Option'. The main content area is titled 'DVR Connected' and includes a 'Sync Date Time to DVR' button. It offers two selection options: 'PC Date Time' and 'Custom Date Time'. Under 'PC Date Time', the current date is '16 Jun, 2018' and the time is '13:57:12'. Under 'Custom Date Time', the date is set to '16 Jun, 2018' and the time is '13:54:24'. At the bottom, a 'DVR Date Time SnapShot' section shows the date '16 Jun, 2018' and time '13:54:34'.

BHS Cam Setup Tool

BRICKHOUSE SECURITY
WHEN YOU NEED TO KNOW.

Version 1.5.1
<http://www.brickhousesecurity.com>

Model Black Box Pro HD
Firmware Version 1.1.06

DVR Connected [Sync Date Time to DVR](#)

PC Date Time

Date	Time
16 Jun, 2018	13:57:12

Custom Date Time

Date	Time
16 Jun, 2018	13:54:24

DVR Date Time SnapShot

16 Jun, 2018	13:54:34
--------------	----------

Camera Instructions and Settings for Dissembler Camera System



Note: Vertical flip allows for proper orientation, otherwise your videos will be up-side-down.

Camera Instructions and Settings for Dissembler Camera System



Note: PIR-Trigger (Passive Infrared Sensor) is disabled due to distance limitations. Leaving it enabled can decrease battery life.

Note: Motion Trigger Sensitivity may be enabled but can be very sensitive. A leaf blowing by, rain, change in shadows by passing clouds can trigger a recording.

Scheduled Recording: Click Edit. To pick specific schedule times to record, left click and hold in the day/time you wish to start and drag the mouse to the time you wish to stop recording. A window will pop up after you have made your selection prompting options for types of recordings.

Camera Instructions and Settings for Dissembler Camera System

Schedule Settings
✕

✓ OK ✗ Cancel

	Sunday	Monday	Tuesday	Wednesday	Thursday	Friday	Saturday
00:00							
03:00							
06:00	Recording Task		Recording Task				
09:00							
12:00							
15:00		Recording Task					
18:00							
21:00							

LEGEND:

Recording Task

 
Voice-Trigger Option

Vibration-Trigger Option

Motion-Trigger Option

PIR-Trigger Option

Camera Instructions and Settings for Dissembler Camera System

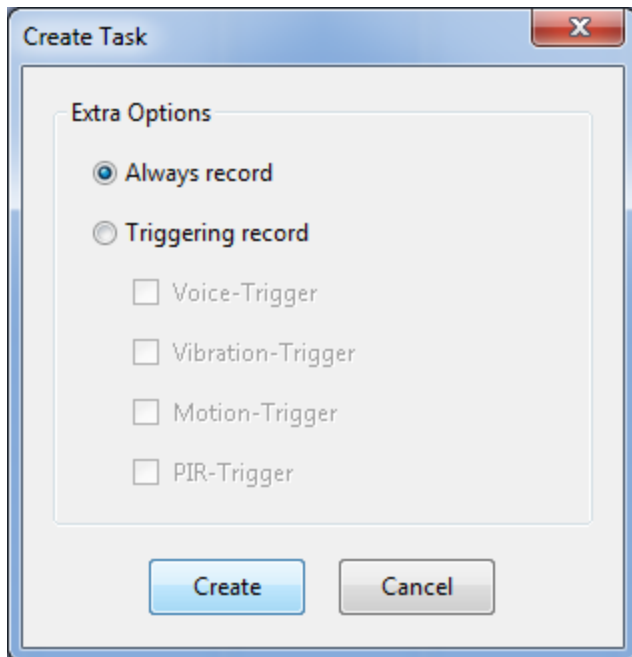

Click “Create” when done. Repeat as necessary for this schedule. When finished setting up the schedule, click “OK” and you will return to the main settings.

Step 6:

Sync settings to DVR by clicking “Sync Settings to DVR”. The orange exclamation triangle will change to a green check mark when the process is complete.

Camera Instructions and Settings for Dissembler Camera System

The screenshot displays the 'BHS Cam Setup Tool' window. At the top left is the Brickhouse Security logo with the tagline 'WHEN YOU NEED TO KNOW.' To the right of the logo, it shows 'Version 1.5.1' and the website 'http://www.brickhousesecurity.com'. Further right, it identifies the device as 'Model Black Box Pro HD' with 'Firmware Version 1.1.06'. Below the header, a yellow warning icon and the text 'Settings Not Sync' are visible, along with a 'Sync Settings to DVR' button. The main settings area includes: 'Video Quality' (radio buttons for High, Medium, Low; Medium is selected), 'Resolution' (radio buttons for 1280 x 720, 640 x 360; 1280 x 720 is selected), 'Frame Rate' (radio buttons for High, Low; Low is selected), 'Day/Night Mode' (radio buttons for Day mode, Night mode, Auto switching; Auto switching is selected), 'Orientation' (radio buttons for Normal, Vertical Flip; Vertical Flip is selected), 'Timestamp' (radio buttons for Enable, Disable; Enable is selected), 'Circular Recording' (radio buttons for Enable, Disable; Disable is selected), and 'Split File Time (min)' (radio buttons for 10, 15, 20; 10 is selected). On the left sidebar, there are three icons: a clock labeled 'Date Time', a gear labeled 'Settings', and a checklist labeled 'Option'.

Camera Instructions and Settings for Dissembler Camera System



Deployment

Turn camera on:

To turn on the camera hold the button down until you see the green light come on. The green light will flash as it powers up. The light will turn off once the camera finishes booting up. This process can take up to 30 seconds. The camera is still on.

Place camera inside housing:

Align camera lens with hole in front cover of housing.

Camera Instructions and Settings for Dissembler Camera System



Camera Instructions and Settings for Dissembler Camera System

Place rear cover to front cover and press it one until flush with the front cover. Make sure to not pinch the camera wire or battery.

Place camera:

Attach Dissembler to wooden pole using provided screws or attach to metal pole nylon straps.



Camera Instructions and Settings for Dissembler Camera System



Step 2: Hang Camera

Camera Instructions and Settings for Dissembler Camera System



Step 3: Insert Bottom Screw

Camera Instructions and Settings for Dissembler Camera System



Step 4: Loosen Bottom Screw
to Remove Camera

Note: Do not use power drill to tighten screws against the Dissembler. Over-tightening can damage the cover.

Camera Instructions and Settings for Dissembler Camera System

Remove Camera:

Remove camera when surveillance is concluded or battery life is up, whichever is sooner. All Dissembler camera housings fit on the same screw template. For longer cases, cameras can easily be switched out for continued surveillance.


To open camera use a flat screw driver to pry off the rear cover using the provided slot in the rear cover.

Turn Camera Off:


Hold button down. An orange light will come on, continue to hold until light goes off.

View Surveillance:

Plug Camera into computer to view files. A folder labeled “BHS” on a removable drive will be available. All video files will be located inside the folder.

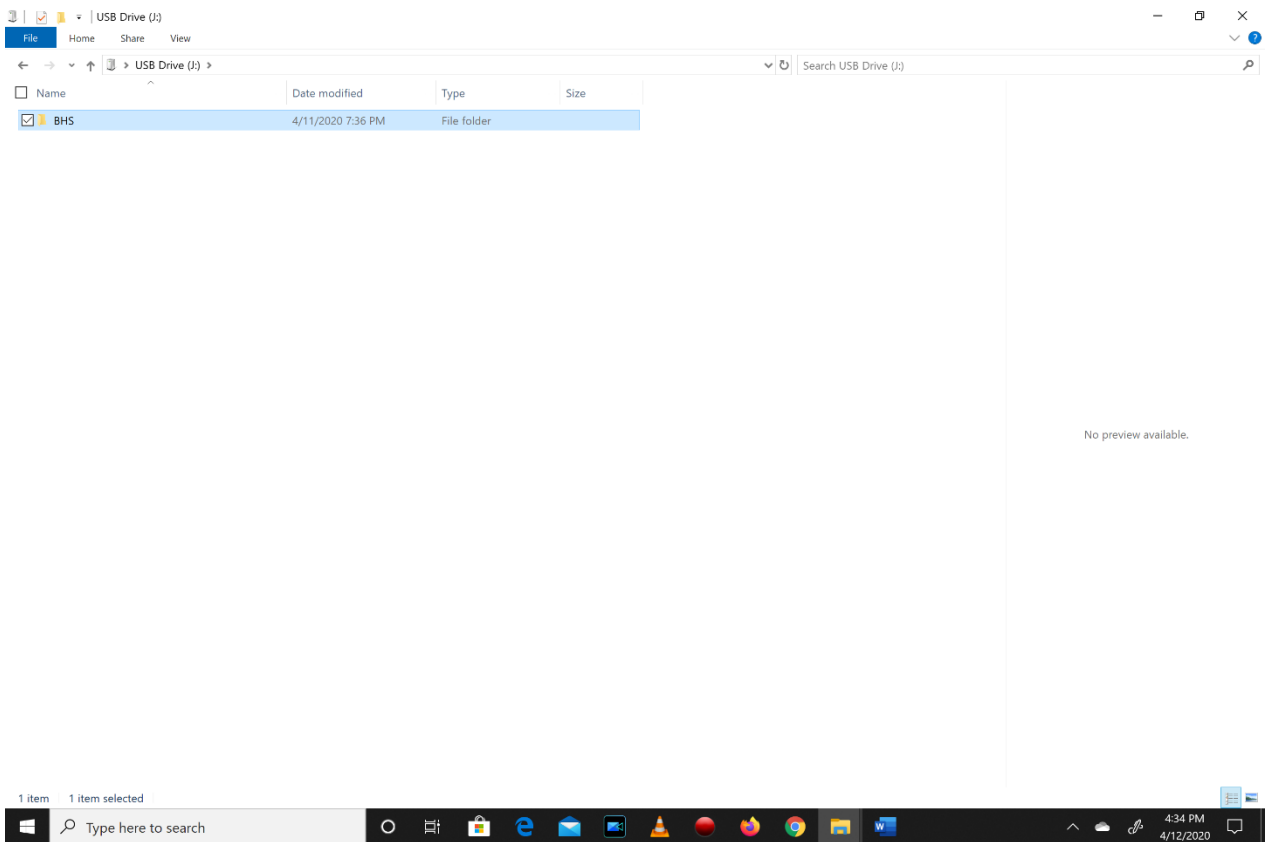

Camera Instructions and Settings for Dissembler Camera System

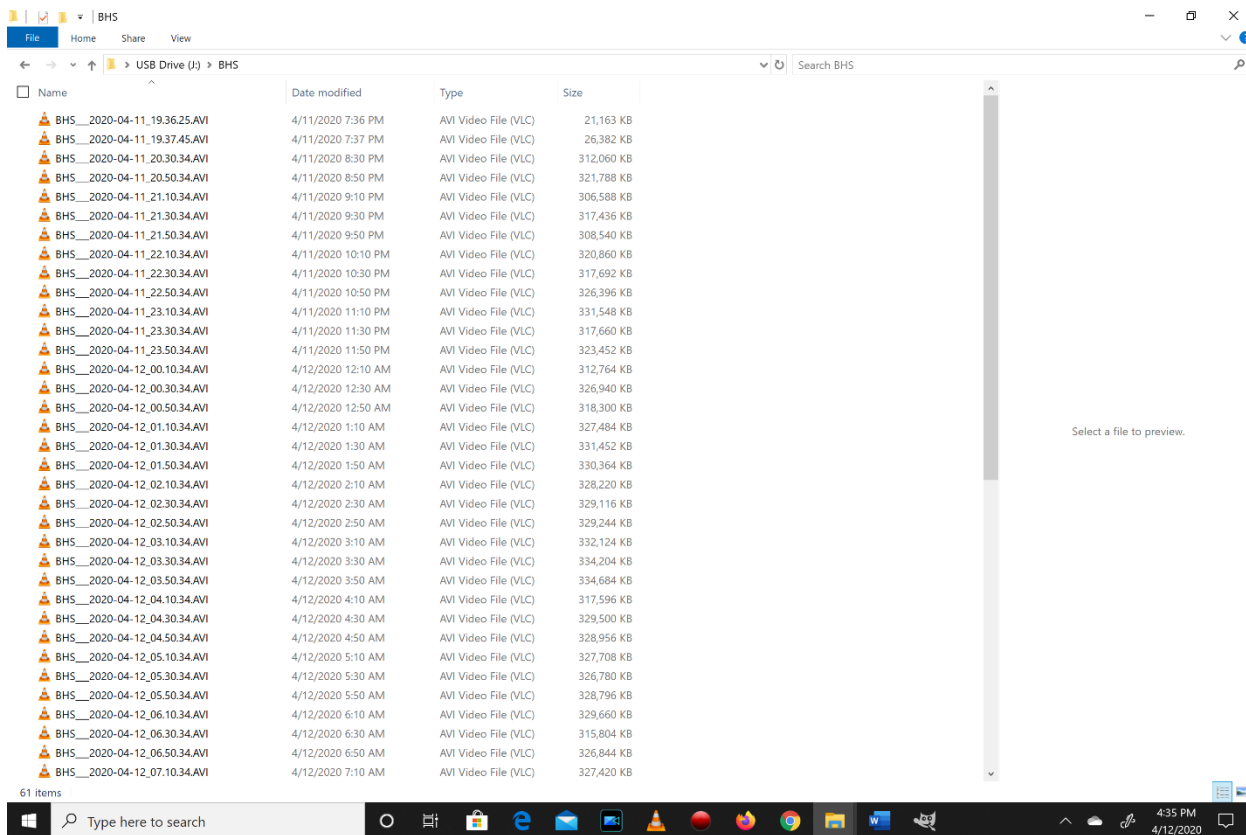

View your video by clicking on the file.

Camera Instructions and Settings for Dissembler Camera System

Example of Dissembler attached to a wooden Pole:



Camera Instructions and Settings for Dissembler Camera System

Example of Dissembler attached to a metal pole:



Attached using Nylon Straps. Long Straps can be found at Lowes or Home Depot. You may need to attach two straps together depending on the size of the pole.

Resources:

Dissembler Standard Camera System Unboxing: <https://youtu.be/BIZFeicLFa>

Dissembler Extended Camera System Unboxing: <https://youtu.be/7Rb4P7UoXPc>

Camera Manual: <http://help.brickhousesecurity.com/customer/portal/articles/1159440-camscura-pro-hd-manual-and-software-for-mac-pc>

Connect Camera to Your Computer: <https://youtu.be/29QJB94AXLc>

Programing Camera: <https://youtu.be/M46pDzcplB8>

How to install on pole: <https://youtu.be/kfXzDFmpOtY>

Camera Instructions and Settings for Dissembler Camera System

Camera Video Help: <http://help.brickhousesecurity.com/customer/portal/articles/1709249-tutorial-video-camscura-pro-hidden-camera-getting-started>

AVI Video Joiner Software (Optional): This software allows you to take many AVI video files and join them into one large video file. This is easier when viewing the files.

[AVI Joiner Software](#)

[AVI Joiner Help Page](#)

Format 64 GB SD cards or Higher: [Software to format 64 GB card](#)

Video Player: Free video download. This video player allows for easier review of surveillance video. [VLC Video Player Download Page](#)

Sample Surveillance Videos:

1. <https://youtu.be/ODVycfglyKc>
2. <https://youtu.be/N4L8AWDTf68>
3. <https://youtu.be/6XT---TBli4>
4. <https://youtu.be/JcCmhwrQbVE>